

CowboyStudio Softbox Setup Instructions

This document contains step-by-step instructions for setting up one of our softboxes. Your softbox kit should include:

- One (1) softbox tent
- One (1) front diffuser panel
- One (1) inner diffuser panel
- Four (4) flex rods
- One (1) spring ring
- One (1) carrying case



Figure 1

Refer to Figure 1 for the items included in the instructional kit.

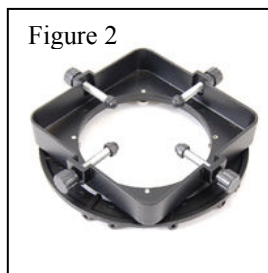


Figure 2

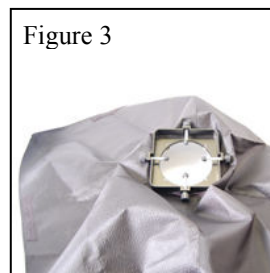


Figure 3

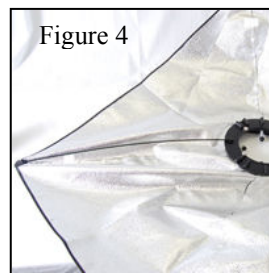


Figure 4

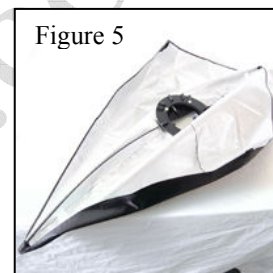


Figure 5

Step 1: Place the spring ring square side up on a large, flat surface as shown in Figure 2.

Step 2: Arrange the softbox tent silver side down over the spring ring. Stretch the elastic center of the softbox tent around the spring ring until it fits around the square part of the spring ring and above the circular bottom. Refer to Figure 3 for a look at this completed step.

Step 3: Flip the spring ring and softbox tent assembly over so that the silver side of the softbox and circular side of the spring ring is visible.

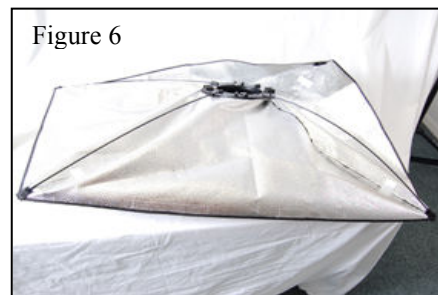


Figure 6

Step 4: Insert the plain end of one flex rod into a slot in the spring ring. Insert the other end (with a silver cap) into the pocket located on one corner of the softbox tent as shown in Figure 4.

Repeat step 4 three more times until all rods are inserted. Refer to Figure 5 and Figure 6 for details. When completed, the assembly should form a box with the spring ring on the surface and the corners of the softbox tent raised above the surface.



Figure 7

Step 5: Attach the inner diffuser panel at each corner of the softbox tent as shown in Figure 7.



Figure 8

Step 6: Arrange the front diffuser panel around the softbox tent as illustrated in Figure 8. Use the Velcro fasteners to securely attach the panel to the softbox tent.

At this point, your softbox is fully assembled.

To mount your softbox on your light, adjust the four screws on the outside of the softbox to approximately the size of the light you are mounting the softbox on. Slide the softbox onto the light and tighten the screws until the softbox is secure. Refer to Figure 9 for an example of our softbox mounted on a 200 watt strobe.



Figure 9

cowboystudio.com