


CowboyStudio Strobe/Flash Lighting Kit Setup Instructions

This document contains step-by-step instructions for setting up one of our strobe/flash lighting kits. Your kit should include:

- One (1) light stand
- One (1) soft white umbrella
- One (1) premium ac light socket
- One (1) strobe/flash bulb

Your kit may also contain a hotshoe or wireless trigger; the exact contents of your kit may vary based upon your order. Refer to Figure 1 for the items included in the instructional kit.

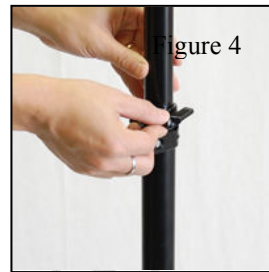

Step 1: Loosen the wing nut at the top of the support stand legs as shown in Figure 2.

Step 2: Expand the legs so that the support stand will stand up on its own as depicted in Figure 3, and then tighten the wing nut.

Step 3: Open the flip locks on the light stand joints to allow the light stand sections to move freely. Raise and lower the sections of the stand to the desired height, and close the flip locks to hold the sections in place. Refer to Figure 4 for a detailed look at these locks.

At this point, the support stand should stand on its own at you desired height, as illustrated in Figure 5.

Step 4: Mount the premium ac light socket on the light stand. Start by loosening the dial at the base of the premium ac light socket. Slide the premium ac light socket onto the tip of the light stand as shown in Figure 6 and tighten the dial until the premium ac light socket fits securely as shown in Figure 7.

Step 5: Adjust the angle of the premium ac light socket by loosening the tabbed dial on the base as shown in Figure 8. Swivel the top of the premium ac light socket until you have it positioned in the desired angle. Then tighten the tabbed dial on the base of the premium ac light socket until it is secure.

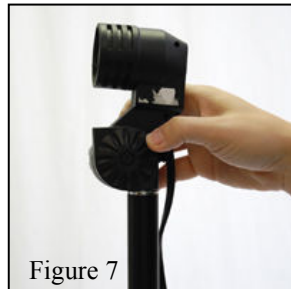




Figure 9



Figure 10

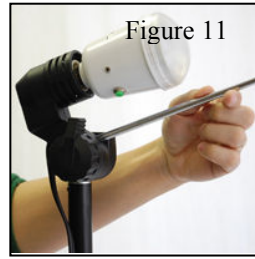


Figure 11

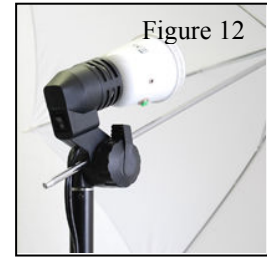


Figure 12

Step 6: Screw the light bulb into the premium ac light socket, as shown in Figure 9. When done, your light bulb and ac light socket should match Figure 10.

Step 7: Open the umbrella and insert the stem of the umbrella into the umbrella hole in the premium ac light socket until the umbrella is secure as shown in Figure 11. Refer to Figure 12 to view a completed setup.

Once fully assembled, your strobe/flash lighting kit should match that in Figure 13.



Figure 13

Cowboystudio